



## User's Guide

### TALKABOUT™ WORD MESSAGE PAGER



Model T350  
FLEX™ Technology

## Contents



### Getting Started

|                              |   |
|------------------------------|---|
| Installing the Battery ..... | 2 |
| Controls .....               | 3 |
| Turning On Your Pager .....  | 4 |
| Standby Screen .....         | 4 |
| Menu Screens .....           | 5 |
| Turning Off Your Pager ..... | 7 |
| Sending a Test Page .....    | 8 |
| Backlight .....              | 9 |



### Time and Date

|                                 |    |
|---------------------------------|----|
| Setting the Time and Date ..... | 10 |
|---------------------------------|----|



### Alerts

|   |    |
|---|----|
| About Alerts .....                        | 11 |
| Setting the Incoming Message Alert .....  | 12 |
| Choosing an Audible (Musical) Alert ..... | 13 |
| Private Time .....                        | 14 |



### Alarms

|                             |    |
|-----------------------------|----|
| Setting the Alarm .....     | 16 |
| Using a Daily Alarm .....   | 17 |
| Turning Off the Alarm ..... | 17 |



### Scrolling

|                                |    |
|--------------------------------|----|
| Setting the Scroll Speed ..... | 18 |
| Reverse Scrolling .....        | 19 |



### Personal Messages

|                                   |    |
|-----------------------------------|----|
| Reading Personal Messages .....   | 20 |
| Storing Personal Messages .....   | 21 |
| Locking Personal Messages .....   | 22 |
| Unlocking Personal Messages ..... | 23 |
| Duplicate Messages .....          | 24 |
| Reading Duplicate Messages .....  | 25 |



### Information Services

|  |    |
|--|----|
| About Information Services .....                       | 26 |
| Reading Information Services .....                     | 27 |
| Turning the Information Service Alert On and Off ..... | 28 |
| Turning the Chirp Alert Off .....                      | 29 |



### Advanced Messaging

|                                     |    |
|-------------------------------------|----|
| Scanning Messages .....             | 30 |
| Deleting a Single Message .....     | 31 |
| Deleting All Messages .....         | 32 |
| Automatic Message Deletion .....    | 33 |
| Setting Message Alarms .....        | 34 |
| Turning Off the Message Alarm ..... | 35 |
| QuickNotes .....                    | 36 |
| Message Error Symbols .....         | 38 |



### Use and Care..... 39

## Getting Started

Hi, I'm QuickStart and I'm going to help you get started.

The Motorola® TalkAbout™ T350 Word Message Pager has lots of cool features -- advanced messaging, time-keeping, news updates, alarms and much more. It's compact and easy to carry.



It can save you money, too. If you have a cell phone, give out your pager number instead of your phone number. That way, you can decide which calls to take and not pay for unwelcome phone calls.

Learning to use the pager is easy, if you read this user's guide.

**A detachable Quick Reference Card is on the back cover.**

The TalkAbout T350 is a great pager. I oughta know ... some of my best friends are pagers!



## GETTING STARTED

1

 


## Installing the Battery

The TalkAbout T350 Word Message Pager uses one AAA-size alkaline battery. When the battery is low, appears between the time and date on the standby screen.


To install the battery do the following:

### First




- Turn off the pager (see page 7).
- Slide door as marked and lift open.

### Then

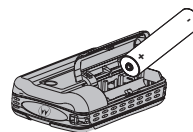 

- Remove old battery, if necessary.
- Insert new battery so the + and - markings match the ones in the battery compartment.

### Finally

 

- Close battery door.
- Slide it shut.

## GETTING STARTED

2

## Controls



Use to --

- Move through menu choices
- Change a number

Use to --

- Turn on the pager
- Read a message
- Save a setting
- Turn on the backlight
- Exit a menu

Use to --

- Enter a menu
- Select a choice



GETTING STARTED

3



GETTING STARTED

4

## Turning On Your Pager

| Press | To Display | Then Press                   |
|-------|------------|------------------------------|
|       | MOTOROLA   | Any button to stop the alert |

 
**Note:** Your pager emits the selected alert.

## Standby Screen

Your pager displays the standby screen whenever it is turned on and nothing else is happening.

Most of the actions described in this guide start on the standby screen.

**Remember this, it's very important!**

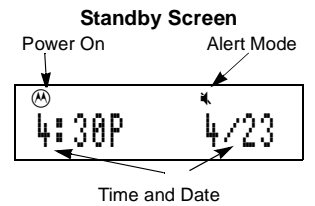

## Menu Screens

You can use your pager's menus to select options and set its features. Let's look at them now. **From --.**



| Press                                   | To Display    | Then Press        |
|---|---------------|-------------------|
| to go to the first menu                 | ALERTS?       |                   |
| and release until you see all the menus | SCROLL SPEED? | to enter any menu |
|   | ALARMS?       |                   |
|   | DELETE ALL?   |                   |

Continued on next page ...



GETTING STARTED

5



GETTING STARTED

6

... continued from previous page

| Press                                   | To Display    | Then Press        |
|---|---------------|-------------------|
| and release until you see all the menus | OFF?          | to enter any menu |
|   | TIME/DATE?    |                   |
|   | PRIVATE TIME? |                   |

**Note:** DELETE ALL appears only if the pager has messages.



Press if you want to go back to the standby screen.

## Turning Off Your Pager



From --

4:30P 4/23

| Press              | To Display | Then Press |
|--------------------|------------|------------|
| until OFF? appears | OFF?       |            |

The pager is now turned off. No icons appear on the off screen, except if the alarm is turned on.

Off Screen

4:30P 4/23



The off screen looks like this.



GETTING STARTED

7



## Sending a Test Page to Yourself



It's a good idea to test your pager and service by sending a page to yourself.

Start by using the phone number, web site or email address (and a PIN, if required) your service provider gave you, then enter a short message.

If you are sending a word message from a phone, an operator will assist you; otherwise, press the phone buttons to enter a numeric message or type a message and send it.

While you are waiting for the message to reach your pager, refer to page 20 for more information about how to read a message. If your pager does not receive the message within a few minutes, contact your service provider.

After you receive the test page, you don't have to call yourself back -- unless you really want to.



GETTING STARTED

8

## Backlight

Being in the dark is never a problem with the TalkAbout T350 Word Message Pager.

Just turn on the backlight by pressing for 2 seconds. The backlight turns off automatically or you can turn it off by pressing again for 2 seconds.

You light up my pager ...



GETTING STARTED

9



## Time and Date



From --

4:30P 4/23

| Press   | To Display  | Then Press                |
|---|-------------|---------------------------|
| until TIME/DATE? appears  | TIME/DATE?  |                           |
| to set the hour<br>Pressing and holding scrolls through numbers quickly.            | 9:00AM 1/01 | to move to the next field |
| and to set the minutes, AM/PM, the 12/24 hour clock setting, the month, and the day | 9:35AM 3/24 | to save the setting       |

 
TIME AND DATE

10


## Alerts

### About Alerts

You can choose how your pager alerts you when it receives a message.



 **CHIRP** -- your pager emits a short beep.



**Note:** If you choose **NO ALERT** or **VIBRATE**, your pager still makes a sound when it receives a priority message.

**VIBRATE** -- your pager vibrates but doesn't make any loud noises.



**ESCALERT™** -- an alert that gets louder and louder.



**AUDIBLE** -- your pager plays a short musical tune.



**NO ALERT** -- your pager doesn't alert you when it receives a message.



ALERTS

11



## Setting the Incoming Message Alert

From --

4:30P 4/23

| Press                              | To Display       | Then Press         |
|------------------------------------|------------------|--------------------|
| until <b>ALERTS?</b> appears       | <b>ALERTS?</b>   | /                  |
| until your choice of alert appears | <b>VIBRATE?</b>  | / to set the alert |
|                                    | <b>AUDIBLE?</b>  |                    |
|                                    | <b>CHIRP?</b>    |                    |
|                                    | <b>ESCALERT?</b> |                    |
|                                    | <b>NO ALERT?</b> |                    |

**Note:** The pager makes a sample of each alert.

To set one of the musical alerts, see "Choosing an Audible (Musical) Alert"

**Note:** After you select an alert, the corresponding icon appears on the standby screen.

ALERTS

12

## Choosing an Audible (Musical) Alert

You've got 8 musical alerts to choose from and they're all very coooooo!



From --

4:30P 4/23

| Press                              | To Display      | Then Press                 |
|------------------------------------|-----------------|----------------------------|
| until <b>ALERTS?</b> appears       | <b>ALERTS?</b>  | /                          |
| until <b>AUDIBLE?</b> appears      | <b>AUDIBLE?</b> | /                          |
| until your choice of alert appears | <b>ALERT 1</b>  | / to set the audible alert |

**Note:** **ALERT 1** now appears on the standby screen.



ALERTS

13

 


## Private Time


When you don't want to be disturbed, use private time to turn off all your alerts.



Private time works on a daily basis. That means your pager will turn off the alerts during the same time each day.

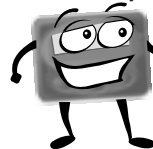

 After private time expires, the alerts turn back on automatically.

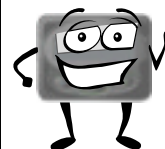

Here's how to turn on private time.

From --

4:30P 4/23

ALERTS

14

| Press   | To Display | Then Press              |
|---|------------|-------------------------|
| until PRIVATE TIME? appears   |            | /                       |
| to turn private time on or off<br><b>Note:</b> C appears around 4 if private time is turned on. |            | /                       |
| to set the start time hour  |            | / to move to next field |
| and / to set the start time minutes and AM/PM, and the stop time hour, minutes and AM/PM        |            | to save setting         |
| <b>Important:</b> Make sure private time is turned on by checking for C on the standby screen.  |            |                         |


## ALERTS

 15



## Alarms

Your pager has 3 alarms to remind you of special times. My favorite is meal time! Here's how it works. **From --**



| Press   | To Display | Then Press   |
|---|------------|--|
| until ALARMS? appears                           |            | /  |
| to select alarm 01, 02, or 03                   |            | /  |
| to turn the alarm on Q or off Q                 |            | /  |
| to adjust the hour                              |            | / to move to the next field                                  |
| and / to set the minutes, AM/PM, month, and day |            | to save<br><b>Note:</b> Q now appears on the standby screen. |

## ALARMS

 
16

## Using a Daily Alarm

To set an alarm to sound at the same time everyday, set the month and day like this.



### Alarm Setting Screen

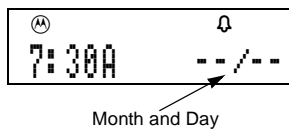

## Turning Off the Alarm

When an alarm sounds, **TURN IT OFF** by pressing any button.

Press the button again to clear the alarm screen.



### Alarm Screen



ALARM and number appear on screen

## ALARMS

17



## Scrolling

### Setting the Scroll Speed

Your pager can display messages Line-by-Line.



And scroll really fast -- that's Scroll 3.



It can scroll messages slowly -- that's Scroll 1.



 
It can even go backward and scroll in reverse.



It can scroll a little faster -- that's Scroll 2.



Here's how to set the forward scroll speed. **From --**



## SCROLLING

18

| Press   | To Display    | Then Press             |
|---|---------------|------------------------|
| until SCROLL SPEED? appears                     | SCROLL SPEED? |                        |
| and release until your scrolling choice appears | LINE-BY-LINE  | to select scroll speed |
|   | SCROLL 1      |                        |
|   | SCROLL 2      |                        |
|   | SCROLL 3      |                        |

#### Reverse Scrolling

While reading a message, press and release to change the direction of the scrolling.

## PERSONAL MESSAGES

### Reading Personal Messages

From --

4:30P 4/23

 
| Press               | To Display                 | Then Press                               |
|---------------------|----------------------------|--|
|                     | ;                          | until the message (▲) is highlighted (■) |
| to read the message | 10:35A<br>2: Call Bill 279 | then  to exit                            |

**Note:** Rest of message appears automatically.

**Note:** You can also let the pager exit automatically.

indicates the message continues on another screen. To stop the scrolling, press . Press it again to resume scrolling.

## PERSONAL MESSAGES

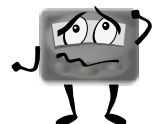

Wow, first you're wondering if you'll **EVER** receive any messages. Then, they start coming in fast and furious. Before you know it, you have so many messages you can't read each one as soon as it arrives.

Don't worry. Your new pager will help you keep everything straight.

Your pager can store up to 16 personal messages. Each stored message is assigned a number, which appears when the message is read. The first message received is 1, the second is 2 and so on.

## PERSONAL MESSAGES

### Locking Personal Messages

Some personal messages are **VERY SPECIAL**. Save special messages by locking them. That way your pager won't erase them to make room for new ones. Here's how.

While reading a personal message --

 
| Press | To Display | Then Press          |
|-------|------------|---------------------|
|       | LOCK?      | to lock the message |

**Note:** You can lock a message only while reading it.

Your message status screen now looks like this.



#### Message Status Screen



Indicates locked message status

## Unlocking Personal Messages



When that special message is no longer special, unlock it. Here's how to do it.

**While reading a locked message --**

| Press | To Display | Then Press            |
|-------|------------|-----------------------|
|       | UNLOCK?    | to unlock the message |

**Note:** You can unlock a message only while reading it.



You can lock up to half of your personal messages. However, after your pager's limit is reached, you must unlock one message before you can lock another one.



PERSONAL MESSAGES

23



 
## Duplicate Messages

Oh, no! Where did that other pager come from?!! Looks just like me.




Seriously, you may receive duplicate messages from time to time.

Your new pager identifies duplicate messages for you in two ways.

Your message status screen displays  whenever a duplicate message is received. It looks like this.



### Message Status Screen

 


Indicates duplicate message


24

## Reading Duplicate Messages

 When you view a duplicate message, your pager lets you know.

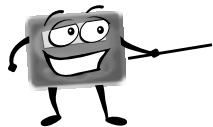

### Duplicate Message Screen

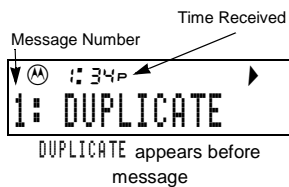 

PERSONAL MESSAGES

25



## Information Services

### About Information Services

When you're always on the go, it's hard to keep up with the latest news. But not if your pager receives information service messages.

They feature daily headlines, sports scores, financial news, and entertainment stories.



Information service messages are news updates sent to your pager by your service provider.


 

 

 
 

 





Your pager doesn't control what it receives or the schedule. Contact your service provider for details.



26

## Reading Information Services

 The news can be confusing. Reading information services is not. Here's how. **From --**

|                      |  |  |
|--|---|--|
| Press  | To Display  | Then Press   |
|                      |  |  until  is highlighted  |
|                      |  |  until the message (U) is highlighted (U)   |
|  to read the message |  |  then  to exit   |



INFORMATION SERVICES


27



INFORMATION SERVICES

28




► indicates the message continues on another screen. To pause the scrolling, press . Press it again to resume scrolling.

## Turning the Information Service Alert On and Off

You can set a chirp alert for each information service. This way, whenever you receive an information service message, your pager lets you know by chirping. Here's how it works.

 
**While reading an information service message --**

| Press  | To Display  | Then Press   |
|--|---|--|
|  until CHIRP ON appears |  |  to turn chirp on |

Your information services message screen now displays  for that message slot.



## Information Service Message Screen

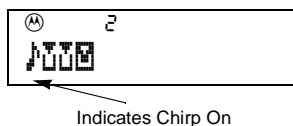


## Turning the Chirp Alert Off

Turning off the chirp alert is easy.

**While reading an information service message --**

| Press  | To Display  | Then Press  |
|--|---|---|
|  until CHIRP OFF appears |  |  to turn chirp off |

**Note:** The information service message screen no longer displays .



INFORMATION SERVICES

29



 
ADVANCED MESSAGING

30

## Advanced Messaging


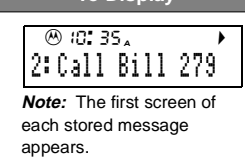 
 
### Scanning Messages

By now, you probably have so many messages you don't have time to read them all.

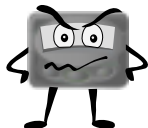

It's a good thing your pager lets you scan your messages so you can concentrate on the important ones. Here's how it works.


**While reading the first screen of a message --**
 
| Press   | To Display  | Then  |
|---|---|---|
|  and hold to read the first screen of each message |  | Release  if you wish to read a specific message entirely |

**Note:** The first screen of each stored message appears.



### Deleting a Single Message

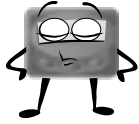

Sometimes the best thing to do with a message is delete it. You can delete messages one at a time or all at once.

Here's how to delete a single message.

**While reading the message --**

| Press                 | To Display  | Then Press |
|-----------------------|---|------------|
| until DELETE? appears |  |            |

**Note:** You can delete a message only while reading it. For information on how to read messages, see "Reading Personal Messages" on page 20.



ADVANCED MESSAGING

31

 




### Deleting All Messages

Sometimes you just need to clean house. DELETE ALL erases all read and unlocked messages. Locked or unread messages are not deleted. Here's how it works.

**From --**





| Press                     | To Display  | Then Press |
|---------------------------|---|------------|
| until DELETE ALL? appears |  |            |
|                           |  | to delete  |

ADVANCED MESSAGING

32

### Automatic Message Deletion

Your pager has room for 16 messages.

When its message slots fill up, the pager displays this on the standby screen.



If the memory is full when a new message arrives, your pager deletes the oldest, **unlocked and read** message. If all the messages are unread, your pager deletes the **oldest unread message** and displays this on the message status screen.



This happens automatically. Your pager does all the work.

#### Memory Full Screen



#### Unread Message Deleted Screen





ADVANCED MESSAGING

33


 




### Setting Message Alarms



You can set an alarm to remind you to read a message at a certain time. Here's how.

**While reading a message --**

| Press   | To Display  | Then Press                |
|---|---|---------------------------|
| until ALARMS? appears                         |  |                           |
| to turn the alarm on or off                   |  |                           |
| to adjust the hour                            |  | to move to the next field |
| and to set the minutes, AM/PM, month, and day |  | to save setting           |

 
ADVANCED MESSAGING

34

Your message screen now looks like this.





#### Message Screen




Indicates message alarm turned on

#### Turning Off the Message Alarm



When the alarm sounds, press  to stop it. Press  again to read the message.

If you do not turn off the alarm and read the message,  flashes until you do.

 


#### QuickNotes

QuickNotes are coded messages that are fun to use.

Each QuickNote is assigned a certain code. When the person paging you enters one of the codes, the corresponding QuickNote appears on your message screen.

For example: Entering code **\*\*01\*\*** displays *Running Late* on your message screen.

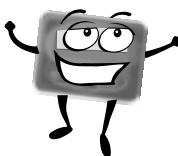

QuickNotes can also be used as part of a message. For example: Entering **\*\*08\*\*9** displays *Meet you at 9* on the message screen.

There are 10 QuickNotes stored in your pager. They are listed on the next page. Give a copy to those who page you frequently.

**Note:** QuickNotes are subject to change. Contact your service provider for additional details and to verify the QuickNote list.

When the person paging you enters this code ...

**\*\*01\*\***

... this appears on the message screen.

Running late

**\*\*02\*\***

I'm on my way

**\*\*03\*\***

Pick me up

**\*\*04\*\***

I'm home

**\*\*05\*\***

Come home

**\*\*06\*\***

Call home

**\*\*07\*\***

Where are you

**\*\*08\*\***

Meet you at

**\*\*09\*\***

I love you


**\*\*10\*\***


I miss you

 


#### Message Error Symbols



Whenever your pager receives a message with errors, your pager will display the message with  over the characters that are incorrect.


When a message is too long, the pager shortens it and displays .

When part of a message is missing, the pager displays  instead of the missing fragment.

#### Incorrect Characters


 
#### Shortened Message



#### Fragmented Message



## Use and Care



Clean with a soft cloth dampened with soap and water.



Do not immerse in water.



Do not use alcohol or other cleaning solutions.



Do not expose to excessive heat ...



... or extreme shock ...



... or moisture.



## USE AND CARE

39



## USE AND CARE

40



### Repairs

1-800-548-9954 (U.S.)  
1-800-793-7834 (TTY-U.S.)  
1-800-323-9685 (Canada)



### Extended Warranty

1-800-548-9954  
(also your paging provider or retailer)

 


### Questions

1-800-548-9954 (U.S.)  
1-800-793-7834 (TTY-U.S.)  
[www.motorola.com](http://www.motorola.com)

*Well, there you have it. The TalkAbout T350 Word Message Pager is a messenger, a watch, a news service, and whole lot more.*

*All that great stuff packed into an attractive, compact design ... just like me.*

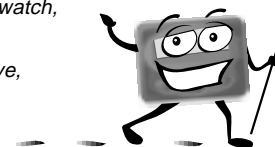

## Patent Information

This pager is manufactured under one or more Motorola U.S. Patents. A partial listing of these patents is provided on the inside surface of the battery door. Other patents covering this product are pending.

**Note:** Only the first 15 patents listed below apply to pager models which utilize the POCSAG protocol.

|             |             |             |
|-------------|-------------|-------------|
| 1. 4336524  | 13. 5247519 | 25. 5450071 |
| 2. 4385295  | 14. 5073767 |             |
| 3. 4412217  | 15. 5157391 |             |
| 4. 4518961  | 16. 5128665 |             |
| 5. 4701759  | 17. 5117500 |             |
| 6. 4755816  | 18. 5168493 |             |
| 7. 4829466  | 19. 5051993 |             |
| 8. 4839628  | 20. 5311516 |             |
| 9. 4851829  | 21. 5325088 |             |
| 10. 5381138 | 22. 5371737 |             |
| 11. 4893271 | 23. 4860003 |             |
| 12. 4910510 | 24. 5414419 |             |

## PATENT INFORMATION

41

## FCC Compliance

This device complies with part 15 of the FCC Rules Operation and is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC COMPLIANCE

42

## Warranty

### ONE (1) YEAR STANDARD LIMITED WARRANTY AND PROVISIONS (U.S.A. ONLY)

Motorola warrants the pager against defects in material and workmanship under normal use and service for the period of time specified below. This express warranty is extended by Motorola, 1500 Gateway Blvd., Boynton Beach, Florida 33426 to the original end user purchaser only and is not assignable or transferable to any other party.

This warranty sets forth the full extent of MOTOROLA's responsibilities regarding the pager. Repair, replacement, or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY IS LIMITED TO THE DURATION CHOSEN. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE MOTOROLA PAGER, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

Motorola pagers are shipped from the factory with a standard limited warranty of one (1) year on parts and labor from date of purchase by the original end user purchaser, based on proof of purchase. In the event of a defect, malfunction, or failure to conform to specifications during the warranty period, Motorola, at its option, will either repair, replace or refund the purchase price of the pager. Repair, at Motorola's option, may include the replacement of parts or boards with functionally equivalent reconditioned or new parts or boards. (continued)

WARRANTY

43

WARRANTY

44

### LIMITED WARRANTY AND PROVISIONS (U.S.A.) continued

Replaced parts and boards are warranted for the balance of the original warranty period. All parts and boards removed in the replacement process shall become the property of Motorola.

This warranty does not cover defects, malfunctions, performance failures or damages to the unit resulting from use in other than its normal and customary manner, misuse, accident or neglect, the use of non-conforming parts, or improper alterations or repairs. This warranty does not cover wear and tear on covers or housings, nor the coverage or range over which the pager will receive signals.

For information on how to receive service on Motorola pagers or covered accessories, call 1-800-548-9954 or 1-800-793-7834 (TTY).

Pager warranty will be VOID if any of the following conditions occur:

- Pagers that are incomplete such as those in which boards or components are missing and/or incompatible.
- Pagers whose serial numbers do not match on the boards, or pagers in which the board serial numbers don't match the housing.
- Pagers that have been opened by, or had work performed by, anyone other than a Motorola authorized pager service center.
- Pagers received with non-conforming or non-Motorola housings or parts.
- Flat rate repair fees apply to pagers and accessories not covered under warranty.

### STATE LAWS

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, THEREFORE THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

## Personal Numbers



Just one more thing. You can use this page to keep track of important numbers.

Service Provider

Pager Number and PIN

|       |       |
|-------|-------|
| _____ | _____ |
| _____ | _____ |

Family and Friends

Pager Number and PIN

|       |       |
|-------|-------|
| _____ | _____ |
| _____ | _____ |
| _____ | _____ |
| _____ | _____ |
| _____ | _____ |
| _____ | _____ |
| _____ | _____ |
| _____ | _____ |

## TalkAbout T350 Word Message Pager Quick Reference Card



On



Private Time on



Message, selected



Message, unselected



Delete All



Audible alert



Chirp alert



Vibrate alert



Alarm turned on



Alarm turned off



Locked message



Out of range



Message continuation



Low-battery



Information service



menu



Information service



menu, selected



Information service



message, selected

- |   |                               |
|---|-------------------------------|
| Information service message, unselected | Duplicate message, unselected |
| Chirp on, selected                      | Duplicate message, selected   |
| Chirp on, unselected                    | Twenty-four hour clock        |
| Locked message, selected                | Twelve hour clock             |
| Locked message, unselected              | Truncated message             |
| Message alarm on, selected              | Errored characters            |
| Message alarm on, unselected            | Missing message fragment      |
|   | Daily alarm setting           |

### Setting the Time and Date

From --

|  | 4:30 P 4/23 |                           |
|--|-------------|---------------------------|
| Press  | To Display  | Then Press                |
| until TIME/DATE? appears   | TIME/DATE?  |                           |
| to set the hour  | 9:00A  1/01 | to move to the next field |
| and  to set the minutes, AM/PM, the 12/24 hour clock setting, the month, and the day | 9:35A  3/24 | to save the setting       |

### Setting the Alarm

From the standby screen --

| Press  | To Display       | Then Press |
|--|------------------|------------|
| until ALARMS? appears  | ALARMS?          |            |
| to select alarm 0 1, 02, or 03                                   | 0 1  12:35P 4/23 |            |
| to turn the alarm on 0 or off 0                                  | 0 1  12:35P 4/23 |            |
| and  to set the hour, the minutes, AM/PM, the month, and the day | 0 1  7:30A 5/27  | to save    |

**Note:** 0 now appears on the standby screen.



Motorola, TalkAbout, FLEX, and Escalart are trademarks or registered trademarks of Motorola, Inc.  
Reg. U.S. Pat. & Tm. Off.  
© 1999 by Motorola, Inc. All Rights Reserved.

Personal Communications Sector  
1500 Gateway Blvd., Boynton Beach, FL 33426-8292  
Printed in U.S.A. 12/99



6881034B80-0